



1. Your new logger comes ready to go.

Simply press and hold the O button until the green LED lights up to start logging.




2. Now place your logger in the location you want to monitor.

Once logging, pressing the O button will light up an LED to give a quick indication of the status. It will also add a marker to the data to show that you have checked it.

•	Green single flash The data logger is currently logging	No action required
••	Green double flash The data logger's memory is full	Plug your logger in to a PC and download your readings
0	No LEDs flash The data logger is stopped or the battery is flat	Check the logger's status using the PC software

When you are ready to view the recorded data on your logger, download the EasyLog CC software.

Visit www.praxas.com/en-qb/Support/Downloads and click on the download link.

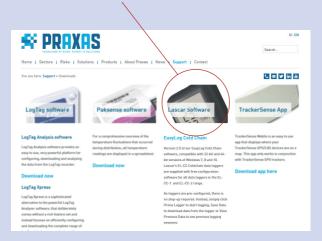

Double click on the downloaded EasyLog CC Installer.exe file, and follow the on screen prompts.

4. To save your data, remove the logger from the plastic sleeve and connect it to a USB port.

Open the EasyLog CC software and click on Save Data.



This will automatically open up your readings in the EasyLogGraph software, where you can view your data or export it in various formats.

For a full product data sheet, or for more information on the whole EasyLog range visit: www.praxas.com/en-gb/Solutions/Datarecorders